# **SAUTER** Code 104RDT940F902E103SAU | Page 1 of 2 | PT 28/25 RDT940F902 - Configurable controllers

### GB ENGLISH

Read this document carefully before installing and using the device and follow all the additional information; keep this document close to the device for future consultations.

For further information consult the hardware manual. The device must be disposed according to the local legislation about the collection for electrical and electronic equipment.

### INTRODUCTION

RDT940F902 is a range of configurable controllers for applications in refrigeration and air conditioning sectors.

The controllers have a considerable number of inputs and outputs; they allow to realize a flexible, modular and expandable control devices network. The variety of available communication ports (RS-485, CAN, USB and Ethernet) and supported communication protocols make easier the integration of the devices in systems. For information on the use of the BACnet communication protocol please consult the PICS.


The actual version implements a BACnet® standardized device profile B-ASC, which doesn't require the managing of Scheduler and Calendar objects, instead required for the B-AAC profile.

# DESCRIPTION Description ng drawing shows the aspect of the devices. 555555 555555555 0000 **00000** 17 digital outputs K8 and K9

The following chart shows the meaning of the parts of the devices.

|   | the devices. |  |  |
|---|--------------|--|--|
|   | Part         | Meaning  |  |
|   | 1            | digital outputs K1 and K2                        |  |
|   | 2            | digital outputs K3, K4, K5 and K6                |  |
|   | 3            | digital output K7                                |  |
|   | 4            | MODBUS TCP, Web Server Ethernet port             |  |
|   | 5            | digital output K11                               |  |
|   | 6            | display and keyboard (not available in the blind |  |
|   |              | versions)  |  |
|   | 7            | digital inputs 1 5                               |  |
|   | 8            | analog outputs 1 3                               |  |
|   | 9            | USB port   |  |
| Ö | 10           | analog inputs 1 6                                |  |
|   | 11           | micro-switch to plug in the CANBUS CAN port      |  |
|   |              | line termination, the MODBUS master/slave        |  |
|   |              | RS-485 port line termination and the MODBUS      |  |
|   |              | slave RS-485 port line termination               |  |
|   | 12           | MODBUS slave RS-485 port, MODBUS master/         |  |
|   |              | slave RS-485 port and CANBUS CAN port            |  |
| 5 | 13           | power supply                                     |  |
|   | 14           | analog outputs 7 10 and analog outputs           |  |
|   |              | 4 6  |  |
|   | 15           | digital inputs 6 13                              |  |
|   | 16           | signalling LEDs                                  |  |
|   |              |  |  |


### digital output K10 SIZE AND INSTALLATION

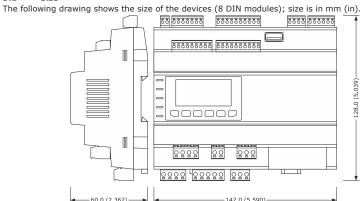



### Installation

Installation is on DIN rail 35.0 x 7.5 mm (1.377 x 0.295 in) or 35.0 x 15.0 mm (1.377 x 0.590 in), into a switch-


To install the devices operate as shown in the following

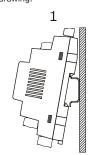

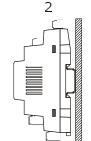

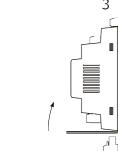

drawing.

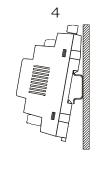

To remove the devices remove possible extractable screw ter-

minal blocks plugged at the bottom first, then operate on the

DIN rail clips with a screwdriver as shown in the following

#### 3.3 Additional information for the installation

make sure the working conditions of the device (operating temperature, operating humidity, etc.) are in the limits indicated; look at chapter "TECHNICAL DATA"

To install the devices again press the DIN rail clips to the end


do not install the device close to heating sources (heaters, hot air ducts, etc.), devices having big magnetos (big speakers, etc.), locations subject to direct sunlight, rain, humidity, dust, mechanical vibrations or bumps

according to the safety legislation, the protection against possible contacts with the electrical parts must be ensured by a correct installation of the device; all the parts which ensure the protection must be fixed so that you can not remove them if not by using a tool.

### **ELECTRICAL CONNECTION**

#### 4.1 Connectors

The following drawing shows the connectors of the devices.

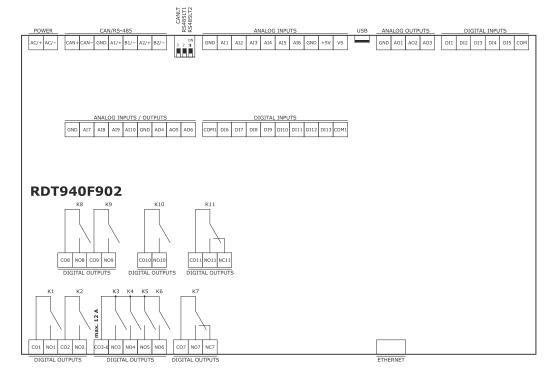

### 4.2 Meaning of connectors

The following charts show the meaning of the connectors of the devices.

For further information look at chapter "TECHNICAL DATA".

Power supply device (24 VAC/DC not isolated).

If the device is powered in direct current, it will be necessary to respect the polarity of the power supply voltage. If the device is connected to a devices network, it will be

the power supply of the devices making the network is

galvanically isolated one another - the phase supplying the device is the same supplying all

### the devices making the network. Part Meaning

power supply device

- if the device is powered in alternate current, connect the phase
- if the device is powered in direct current, connect the positive pole

power supply device:

- if the device is powered in alternate current, connect the neutral
- if the device is powered in direct current, connect the negative pole

### ANALOG INPUTS

| Analog inputs. |  |  |
|----------------|--|--|
| Part           | Meaning  |  |
| GND            | ground analog inputs                               |  |
| AI1            | analog input 1, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000, Ni 1000 probes,   |  |
|                | 0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers |  |
| AI2            | analog input 2, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000, Ni 1000 probes,   |  |
|                | 0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers |  |
| AI3            | analog input 3, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000, Ni 1000 probes,   |  |
|                | 0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers |  |
| AI4            | analog input 4, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000 or Ni 1000 probes  |  |
| AI5            | analog input 5, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000 or Ni 1000 probes  |  |
| AI6            | analog input 6, which can be set via configuration |  |
|                | parameter for PTC, NTC, Pt 1000 or Ni 1000 probes  |  |
| GND            | ground analog inputs                               |  |
| +5V            | power supply 0-5 V ratiometric transducers (5 VDC) |  |

VS power supply 0-20 mA, 4-20 mA and 0-10 V transducers (12 VDC)

### DIGITAL INPUTS

| Digitai | inputs. |
|---------|---------|
| Doub    | Man     |

| Part | meaning  |
|------|--|
| DI1  | digital input 1 (24 VAC/DC, 50/60 Hz or 2 KHz      |
|      | optoisolated)                                      |
| DI2  | digital input 2 (24 VAC/DC, 50/60 Hz or 2 KHz      |
|      | optoisolated)                                      |
| DI3  | digital input 3 (24 VAC/DC, 50/60 Hz optoisolated) |
| DI4  | digital input 4 (24 VAC/DC, 50/60 Hz optoisolated) |
| DI5  | digital input 5 (24 VAC/DC, 50/60 Hz optoisolated) |

### **DIGITAL INPUTS**

| Digital inputs. |   |  |
|-----------------|---|--|
| Part            | Meaning   |  |
| COM1            | common digital inputs                               |  |
| DI6             | digital input 6 (24 VAC/DC, 50/60 Hz optoisolated)  |  |
| DI7             | digital input 7 (24 VAC/DC, 50/60 Hz optoisolated)  |  |
| DI8             | digital input 8 (24 VAC/DC, 50/60 Hz optoisolated)  |  |
| DI9             | digital input 9 (24 VAC/DC, 50/60 Hz optoisolated)  |  |
| DI10            | digital input 10 (24 VAC/DC, 50/60 Hz optoisolated) |  |
| DI11            | digital input 11 (24 VAC/DC, 50/60 Hz optoisolated) |  |
| DI12            | digital input 12 (24 VAC/DC, 50/60 Hz optoisolated) |  |
| DI13            | digital input 13 (24 VAC/DC, 50/60 Hz optoisolated) |  |
| COM             | common digital inputs                               |  |
|                 |   |  |
|                 |   |  |

| ANALOG OUTPUTS |   |  |  |
|----------------|---|--|--|
| Analog o       | Analog outputs.                                     |  |  |
| Part           | Meaning   |  |  |
| GND            | ground analog outputs                               |  |  |
| AO1            | analog output 1, which can be set via configuration |  |  |
|                | parameter for PWM or 0-10 V                         |  |  |
| AO2            | analog output 2, which can be set via configuration |  |  |
|                | parameter for PWM or 0-10 V                         |  |  |
| AO3            | analog output 3, which can be set via configuration |  |  |
|                | parameter for 0-20 mA, 4-20 mA or 0-10 V            |  |  |
|                | 1   |  |  |
|                |   |  |  |
|                |   |  |  |

### ANALOG INPUTS / OUTPUTS

Analog inputs and outputs.

| Part | Meaning  |
|------|--|
| GND  | ground analog inputs and outputs                   |
| AI7  | analog input 7, which can be set via configuration |
|      | parameter for PTC, NTC, Pt 1000, Ni 1000 probes,   |
|      | 0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers |
| AI8  | analog input 8, which can be set via configuration |
|      | parameter for PTC, NTC, Pt 1000, Ni 1000 probes,   |
|      |  |

0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers analog input 9, which can be set via configuration parameter for PTC, NTC, Pt 1000, Ni 1000 probes, 0-20 mA, 4-20 mA, 0-5 V rat. or 0-10 V transducers

AI10 analog input 4, which can be set via configuration parameter for PTC, NTC, Pt 1000 or Ni 1000 probes ground analog inputs and outputs

analog output 4, which can be set via configuration parameter for 0-20 mA, 4-20 mA or 0-10 V AO5 analog output 5, for 0-10 V

AO6 analog output 6, for 0-10 V

CO1 common digital output 1

### **DIGITAL OUTPUTS**

Digital outputs. Part Meaning

| COI   | common digital output 1                            |  |  |
|-------|--|--|--|
| NO1   | normally open contact digital output 1             |  |  |
|       | according to the model:                            |  |  |
|       | - 3 res. A @ 250 VAC electromechanical relay       |  |  |
|       | - 24 VAC/DC, 600 mA max. command for solid         |  |  |
|       | state relay  |  |  |
| CO2   | common digital output 2                            |  |  |
| NO2   | normally open contact digital output 2             |  |  |
|       | according to the model:                            |  |  |
|       | - 3 res. A @ 250 VAC electromechanical relay       |  |  |
|       | - 24 VAC/DC, 600 mA max. command for solid         |  |  |
|       | state relay  |  |  |
| CO3-6 | common digital outputs 3 6                         |  |  |
| NO3   | normally open contact digital output 3 (3 res. A @ |  |  |
|       | 250 VAC electromechanical relay)                   |  |  |
| NO4   | normally open contact digital output 4 (3 res. A @ |  |  |
|       | 250 VAC electromechanical relay)                   |  |  |
| NO5   | normally open contact digital output 5 (3 res. A @ |  |  |
|       | 250 VAC electromechanical relay)                   |  |  |
| NO6   | normally open contact digital output 6 (3 res. A @ |  |  |
|       | 250 VAC electromechanical relay)                   |  |  |
| CO7   | common digital output 7                            |  |  |
| NO7   | normally open contact digital output 7 (3 res. A @ |  |  |
|       | 250 VAC electromechanical relay)                   |  |  |

### CO8 common digital output 8 normally open contact digital output 8 according to the model: 3 res. A @ 250 VAC electromechanical relay 24 VAC/DC, 600 mA max, command for solid state relav CO9 common digital output 9 NO9 normally open contact digital output 9 ccording to the model 3 res. A @ 250 VAC electromechanical relay

NO10 normally open contact digital output 10 (3 res. A @ 250 VAC electromechanical relay)

NO11 normally open contact digital output 11 (3 res. A @ 250 VAC electromechanical relay)

24 VAC/DC, 600 mA max. command for solid

NC7 | normally closed contact digital output 7

## CAN/RS-485

MODRIS clave PS-485 port MODRIS macter/clave

NC11 normally closed contact digital output 11

state relay

CO10 common digital outputs 10

CO11 common digital output 11

|  | MODBOS   | slave K3-465 port, MODBO3 master/slave        |
|--|----------|---|
|  | RS-485 p | port and CAN CANBUS port.                     |
|  | Part     | Meaning                                       |
|  | CAN+     | positive pole CANBUS CAN port                 |
|  | CAN-     | negative pole CANBUS CAN port                 |
|  | GND      | ground MODBUS slave RS-485 port, MODBUS       |
|  |          | master/slave RS-485 port and CAN CANBUS port  |
|  | A1/+     | positive pole MODBUS master/slave RS-485 port |
|  | B1/-     | negative pole MODBUS master/slave RS-485 port |
|  | A2/+     | positive pole MODBUS slave RS-485 port        |

## B2/- negative pole MODBUS slave RS-485 port

USB USB port.

## **ETHERNET**

MODBUS TCP, Web Server Ethernet port.

## Plugging in the CANBUS CAN port line termi-

To plug in the CANBUS CAN port line termination, position micro-switch 3 on position ON.



### Plugging in the MODBUS master/slave RS-485 port line termination

To plug in the MODBUS master/slave RS-485 port line termination, position micro-switch 2 on position ON



## Plugging in the MODBUS slave RS-485 port To plug in the MODBUS slave RS-485 port line termination,

position micro-switch 1 on position ON.



### Polarizing the MODBUS master/slave RS-485 The polarization of the MODBUS master/slave RS-485 port

can be set via configuration parameter.

Polarizing the MODBUS slave RS-485 port The devices are not able to polarize the MODBUS slave RS-485 port; the polarization must be done by another

### 4.8 Additional information for electrical connec-

do not operate on the terminal blocks of the device using electrical or pneumatic screwers

if the device has been moved from a cold location to a warm one, the humidity could condense on the inside; wait about an hour before supplying it

make sure the power supply voltage, the electrical frequency and the electrical power of the device correspond to those of the local power supply; look at chapter "TECHNICAL DATA"

disconnect the power supply of the device before servicing it

- connect the device to a RS-485 devices network using a twisted pair
- connect the device to a CAN devices network using a twisted pair
- position the power cables as far away as possible from the signal cables
- do not use the device as safety device
- for the repairs and for information about the device please contact the Sauter sales network.

### **SIGNALINGS**

| 5.1 | Signalings                                   |  |
|-----|--|--|
| LED | Meaning                                      |  |
| ON  | LED power supply                             |  |
|     | if it is lit, the device will be powered     |  |
|     | if it is out, the device will not be powered |  |

### RUN LED run

if it is lit, the application software will be compiled and running in release modality if it flashes slowly, the application software wil be compiled and running in debug modality if it flashes quickly, the application software will be compiled, running in debug modality and stopped in a breakpoint if it is out:

- the device will not be compatible with the application software
- the device will not be enabled to work with the special ABL (Application Block Libraries)

### LED system alarm

if it is lit, an alarm system not resettable via application software will be running if it flashes slowly, a system alarm with automatic reset will be running

if it flashes very slowly, an access to the external FLASH memory will be running

if it flashes quickly, a system alarm with manual reset will be running f it is out, no alarm system will be running

### CAN LED CANBUS CAN communication

if it is lit, the device will be configured to communicate via CANBUS CAN with another device but the communication will not have been set up if it flashes slowly, the CANBUS CAN communication will have been set up but it will not be completely correct

if it flashes quickly, the CANBUS CAN communication will have been set up and will be correct if it is out, no CANBUS CAN communication will be running

L1 LED auxiliary

### **TECHNICAL DATA**

### Technical data

Purpose of control: operating control device.

Construction of control: incorporated electronic device. Box: self-extinguishing grey

### Heat and fire resistance category: D.

**Size:** 142.0 x 128.0 x 60.0 mm (5.590 x 5.039 x 2.362 in; W x H x D); 8 DIN modules

Size refers to the device with the extractable screw terminal blocks properly plugged.

Method of mounting control: on DIN rail 35.0 x 7.5 mm (1.377 x 0.295 in) or 35.0 x 15.0 mm (1.377 x 0.590 in).

#### Degree of protection: - IP20 on the whole

IP40 the front

### Connections:

- only male removable screw connection terminal blocks with pitch 3.5 mm (0.137 in) for conductors up to 1.5 mm<sup>2</sup> (0.0028 in<sup>2</sup>): power supply, analog inputs, digital inputs, analog outputs, MODBUS slave RS-485 port, MODBUS master/slave RS-485 port and CANBUS CAN port
- only male removable screw connection terminal blocks with pitch 5.0 mm (0.196 in) for conductors up to 2.5 mm<sup>2</sup> (0.0038 in<sup>2</sup>): digital outputs
- A type USB connector: USB port
- RJ45 F telephone connector: MODBUS TCP, Web Server Ethernet port.

The maximum lengths allowed for the connecting cables are the following

- power supply: 100 m (328 ft) analog inputs: 100 m (328 ft)
- power supply transducers: 100 m (328 ft)

- digital inputs: 100 m (328 ft)
- PWM analog outputs: 1 m (3,280 ft)
- 0-20 mA, 4-20 mA and 0-10 V analog outputs: 100 m (328 ft)
- digital outputs (electromechanical relays): 100 m (328 ft)
- digital outputs (command for solid state relays): 100 m (328 ft)
- MODBUS slave RS-485 port and MODBUS master/slave RS-485 port: 1,000 m (3,280 ft); also look at MODBUS specifications and implementation guides manual available on http://www.modbus.org/specs.php
- CANBUS CAN port
- 1,000 m (3,280 ft) with baud rate 20,000 baud
- 500 m (1,640 ft) with baud rate 50,000 baud
- 250 m (820 ft) with baud rate 125,000 baud

same value of that of the other elements

- 50 m (164 ft) with baud rate 500,000 baud according to the factory setting the device automatically detects the baud rate of the other elements making the network, on condition that it is one of those listed before; on afterwards set manually the baud rate to the
- USB port: 1 m (3.280 ft).

To wire the device one suggests using the connecting kit CJAV35 (to order separately): only female removable screw connection terminal blocks with pitch 3.5 mm (0.137 in) for conductors up to 1.5 mm<sup>2</sup> (0.0028 in<sup>2</sup>) and only female removable screw connection terminal blocks with pitch 5.0 mm (0.196 in) for conductors up to 2.5 mm<sup>2</sup> (0.0038 in<sup>2</sup>).

To program the device one suggests using the connecting cables 0810500018 or 0810500020 (to order separately): the cable 0810500018 is  $2.0\ m$  (6.561 ft) long, the cable 0810500020 is 0.5 m (1.640 ft) long.

### Operating temperature:

- from -10 to 55 °C (from 14 to 131 °F) for the built-in versions
- from -20 to 55 °C (from -4 to 131 °F) for the blind ver-

Storage temperature: from -25 to 70 °C (from -13 to

Operating humidity: from 10 to 90% of relative humidity not condensing

### Control pollution situation: 2.

### Environmental conformity:

- RoHS 2011/65/CE
- WEEE 2012/19/EU
- REACH regulation (CE) n. 1907/2006. EMC conformity:

### EN 60730-1

- IEC 60730-1
- Power supply:
  - 24 VAC (+10%, -15%), 50/60 Hz (±3 Hz), 20 VA max. not isolated
- 20... 40 VDC, 12 W max. not isolated

supplied by a class 2 circuit.

Protect the power supply with a 2 A-T 250 V fuse.

If the device is powered in direct current, it will be necessary to respect the polarity of the power supply voltage.

### Rated impulse voltage: 4 KV.

### Overvoltage category: III. Class and structure of software: A.

Real time clock: incorporated (with lithium primary battery) Battery range in absence of power supply: 5 years @ 25  $^{\circ}\text{C}$ (77 °F).

Drift:  $\leq$  30 s/month @ 25 °C (77 °F).

### Analog inputs: 10 inputs:

- 4 which can be set via configuration parameter for PTC, NTC, Pt 1000 or Ni 1000 probes
- 6 which can be set via configuration parameter for PTC, NTC, Pt 1000, Ni 1000 probes, 0-20 mA, 4-20 mA, 0-5 V ratiometric or 0-10 V transducers.

Power supply 0-5 V ratiometric transducers: 5 VDC (+0 %, -12 %), 60 mA max.

Power supply 0-20 mA, 4-20 mA and 0-10 V transducers: 12 VDC (±10 %), 120 mA max

The maximum current which can be supplied on the whole from the two power supply is 120 mA

PTC analog inputs (990 Ω @ 25 °C, 77 °F)

Kind of sensor: KTY 81-121 from -50 to 150 °C (from -58 to Working range

302 °F).  $\pm 0.5$  % of the full scale 0.1 °C. Resolution: 100 ms. Conversion time

none.

NTC analog inputs (10 K $\Omega$  @ 25 °C, 77 °F)

Kind of sensor: ß3435.

Working range: from -40 to 120 °C (from -58 to 248 °F). ±0.5 % of the full scale Accuracy:

from -40 to 100 °C - ±1 °C from -50 to -40 °C

and from 100 to 120 °C.

Conversion time 100 ms. Protection NTC analog inputs (10 KΩ @ 25 °C, 77 °F)

Resolution:

Kind of sensor: NTC type 2. from -40 to 86 °C (from -40 to Working range

0.1 °C.

186 °F). Accuracy ±1 °C. 0.1 °C. Resolution: Conversion time 100 ms Protection: NTC analog inputs (10 KΩ @ 25 °C, 77 °F)

Kind of sensor: NTC type 3. Working range: from -40 to 86 °C (from -40 to

186 °F). Accuracy: ±1 °C Resolution 0.1 °C Conversion time 100 ms Protection: none.

Pt 1000 analog inputs (1 KΩ @ 0 °C, 32 °F) from -100 to 400 °C (from -148 Working range:

to 752 °F). -  $\pm 0.5$  % of the full scale Accuracy: from -100 to 200 °C

±2 °C from 200 to -400 °C. 0.1 °C. Resolution: 100 ms. Conversion time:

Protection: none. Ni 1000 analog inputs (1 KΩ @ 0 °C, 32 °F)

from -50 to 260 °C (from -50 to Working range: 500 °F) ±0.5 % of the full scale Accuracy:

from -50 to 250 °C. Resolution: 0.1 °C. Conversion time: 100 ms Protection: none.

0-20 mA and 4-20 mA analog inputs Input resistance: < 200 Ω. Accuracy: ±0.5 % of the full scale.

Resolution: 0.01 mA. Conversion time 100 ms.

Protection: none; the maximum current allowed on each input is 25 mA.

0-5 V ratiometric and 0-10 V analog inputs

Input resistance: > 10 KQ. Accuracy: ±0.5 % of the full scale. 0.01 V. Resolution 100 ms Conversion time:

Protection: Digital inputs: 13 inputs:

2 at 24 VAC/DC, 50/60 Hz or 2 KHz optoisolated

11 at 24 VAC/DC, 50/60 Hz. 24 VAC/DC, 50/60 Hz digital inputs

24 VAC (±15 %), 50/60 Hz Power supply:

24 VDC (+66 %, -16 %). Input resistance: ≥ 10 KΩ.

none. 24 VAC/DC, 2 KHz digital inputs 24 VAC (±15 %), 50/60 Hz Power supply

(±3 Hz) 24 VDC (+66 %, -16 %).  $\geq$  10 K $\Omega$ . Input resistance:

Protection: Analog outputs: 6 outputs:

Protection

2 for 0-10 V 2 which can be set via configuration parameter for PWM or 0-10 V

2 which can be set via configuration parameter for 0-20 mA, 4-20 mA or 0-10 V.

### PWM analog outputs

10 VDC (+16 %, -25 %), 10 mA Power supply

0... 2 KHz. Frequency Duty: 0... 100 %. Protection: none.

0-20 mA and 4-20 mA analog outputs

Input resistance:  $40...300 \Omega$ 

Accuracy: ±3 % of the full scale.

Resolution: 0.05 mA. Conversion time: 1 s. Protection: none

0-10 V analog outputs

Input resistance: 1 KO ±3 % of the full scale. Accuracy:

+2 %, -5 % of the full scale Resolution for loads having impedance from 1 to 5 K $\Omega$ 

> ±2 % of the full scale for loads having impedance > 5 KΩ.

### Digital outputs: 11 outputs:

- according to the model
- nine 3 res. A @ 250 VAC SPST electromechanical relays (K1... K6 and K8... K10)
- four 24 VAC/DC, 600 mA max. commands for solid state relay (K1, K2, K8 and K9) and five 3 res. A @ 250 VAC SPST electromechanical relays (K3... K6 and K10)
- two 3 res. A @ 250 VAC SPDT electromechanical relay (K7 and K11).

The device ensures a double insulation among each connec tor of the digital outputs and the remaining parts of the de-

### Type 1 or type 2 actions: type 1.

Additional features of type 1 or type 2 action: C.

**Displays:** according to the model:

- none (blind version)
- 4+4 digits custom display (built-in LED version)
- 128 x 64 pixel single colour LCD graphic display (built-in LCD version).

### Communication ports: 5 ports:

- 1 RS-485 port with MODBUS slave communication pro-
- 1 RS-485 port with MODBUS master/slave, BACnet MS/ TP communication protocol
- 1 CAN port with CANBUS communication protocol
- 1 USB port
- 1 Ethernet port with MODBUS TCP, Web Server, BACnet IP communication protocol.

The actual version implements a BACnet® standardized device profile B-ASC, which doesn't require the managing of Scheduler and Calendar objects, instead required for the B-AAC profile.

Protection: